

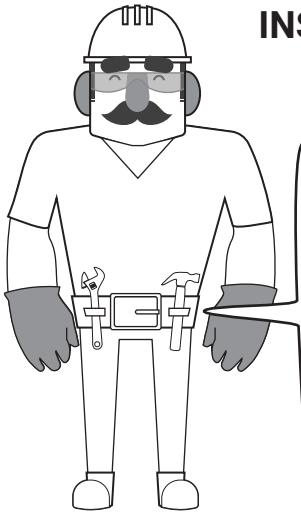


INSTALLATION INSTRUCTIONS: 2019+ RANGER RAIL CAP

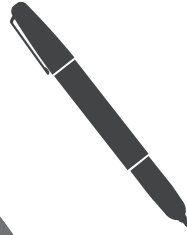


TOOLS NEEDED:

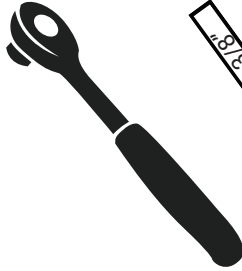


CAUTION:

This equipment is designed to be professionally installed by an approved up-fitter. Always wear ear and eye protection and exercise caution when installing Westcan products.

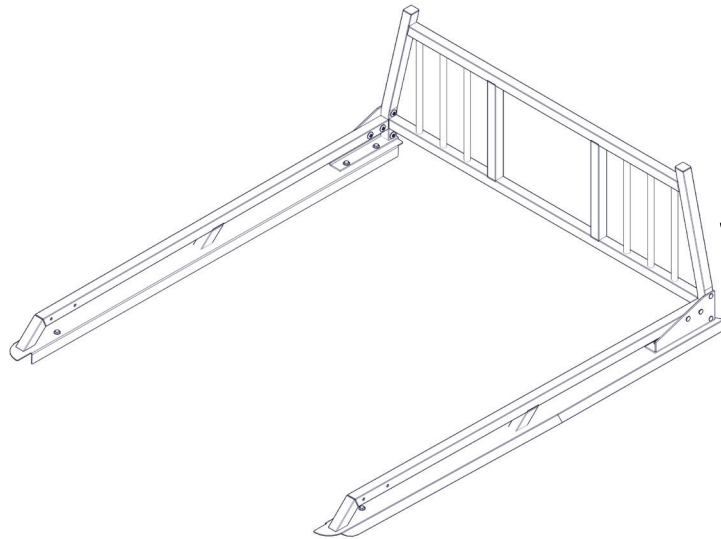


SHORT BOX

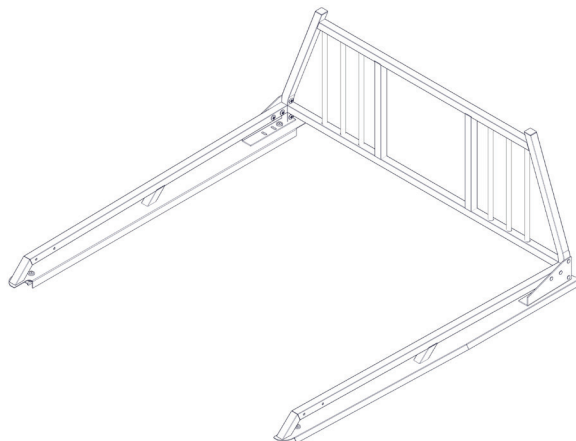

EXTRA SHORT BOX


PREPARATION:

1. Ensure all parts are present and accounted for before installation. **Begin the installation of your cabguard before your rail caps.** Plan the location of your installation ahead of time and make sure your installation location does not impede any other components you are installing or damage the safety and functionality of your vehicle.
2. Exercise extreme diligence when drilling holes into a motor vehicle. Increasing complexity and model year changes can alter the location of fuel, hydraulic and electrical lines. Please visually inspect all locations prior to drilling.

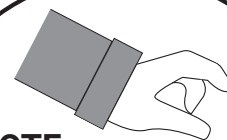


NOTE:
WHEN THE HOLD ICON
IS USED TO TURN A
FASTENER, TIGHTEN
THEM FINGER TIGHT.


1.

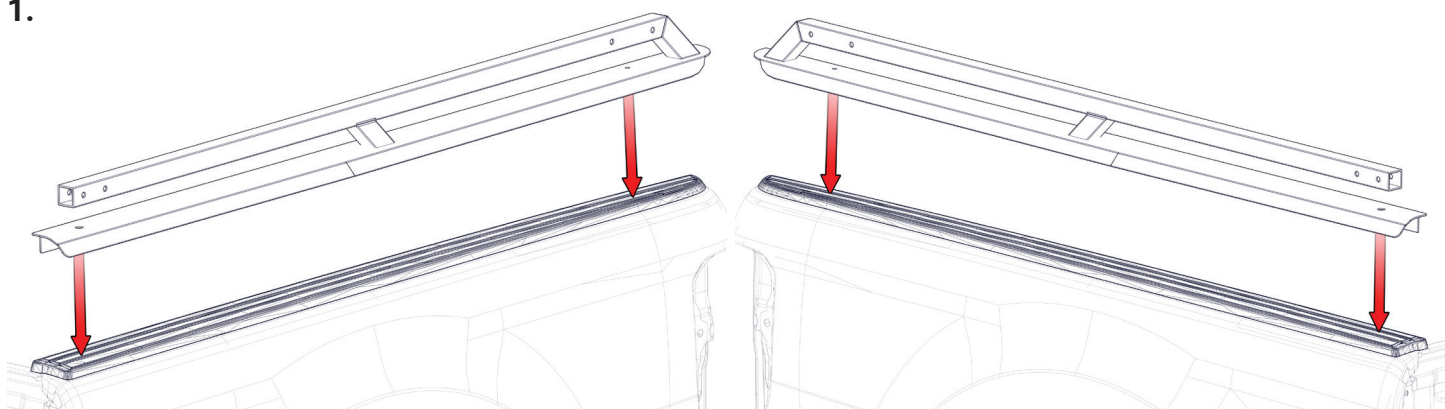


FRONT EDGE OF THE INNER FLANGE LINES
UP WITH THE TRUCK BOX BULKHEAD

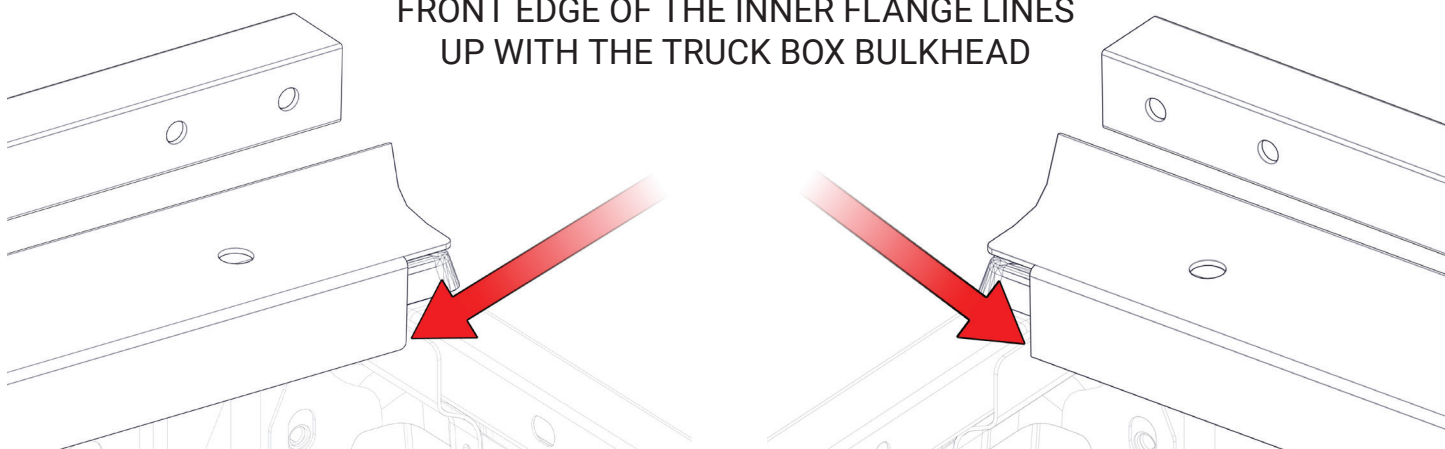


2.

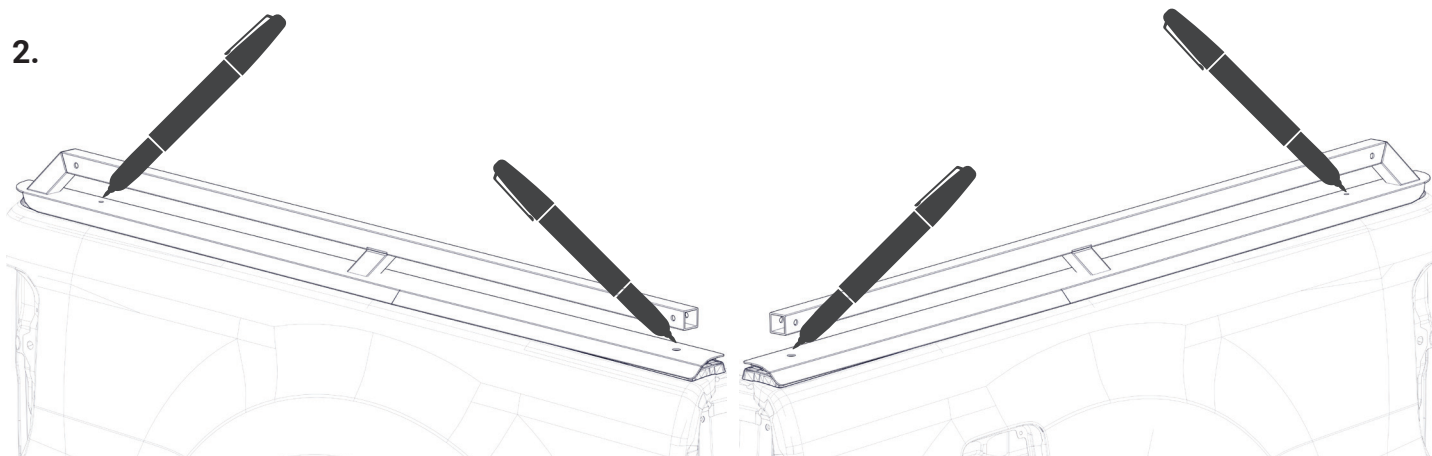

3.

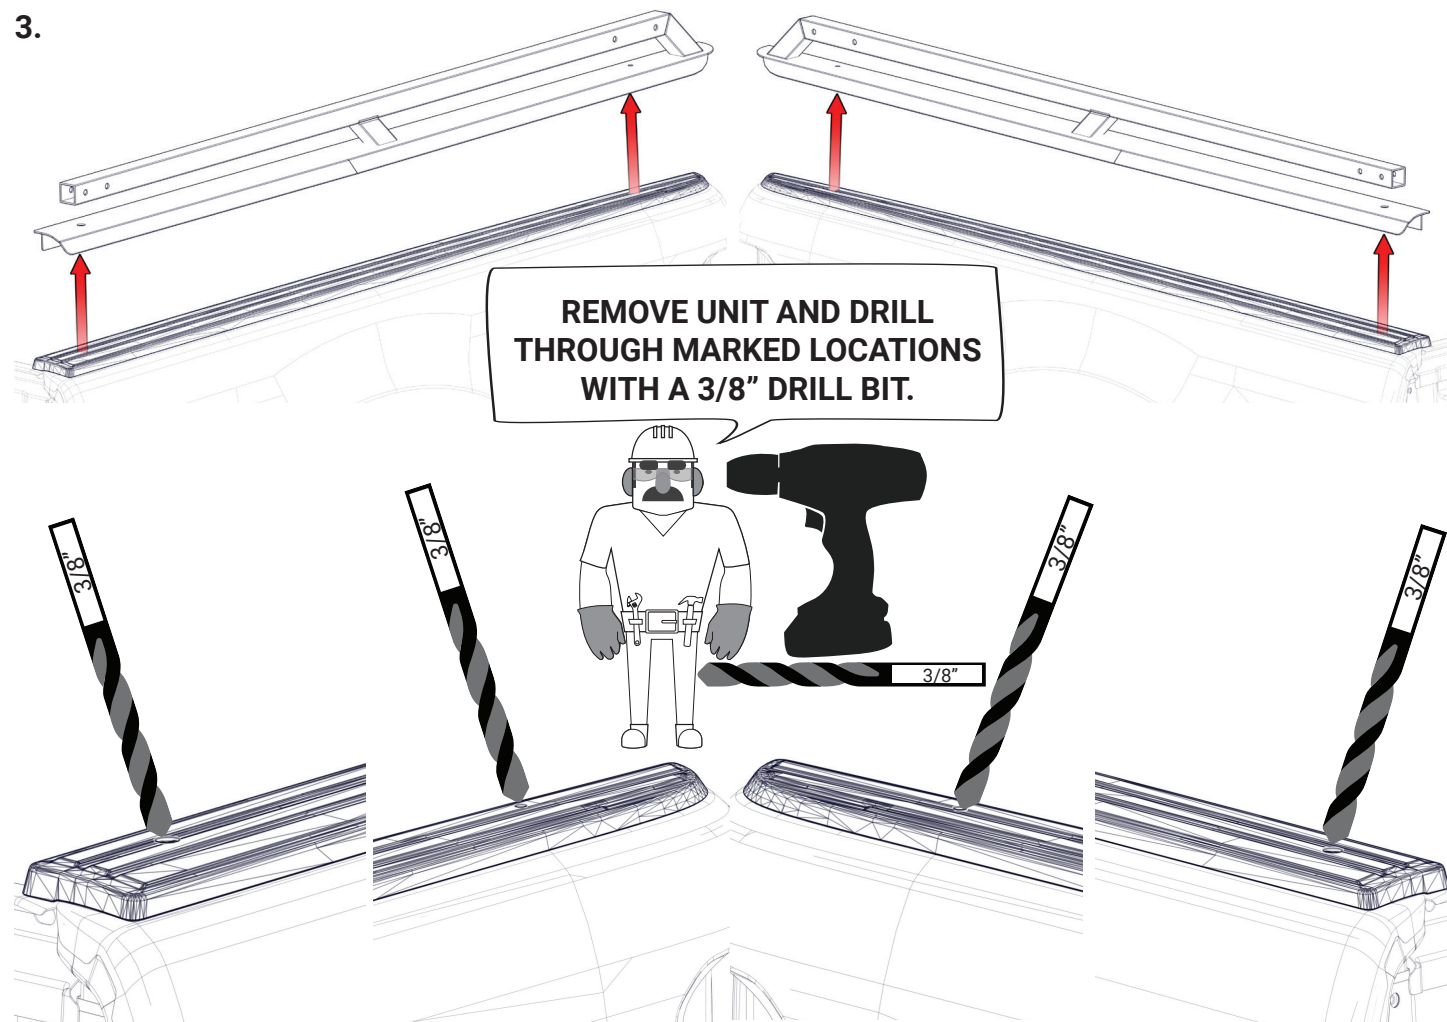


4.

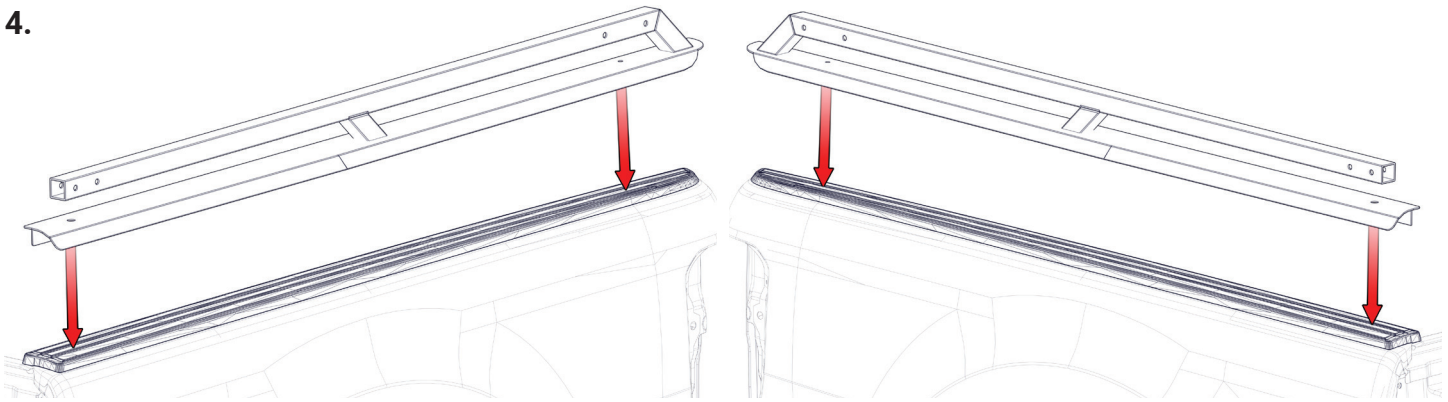

3/8" x 1 1/4" Stainless Steel Hex Bolt

3/8" Stainless Steel Flat Washer

5.

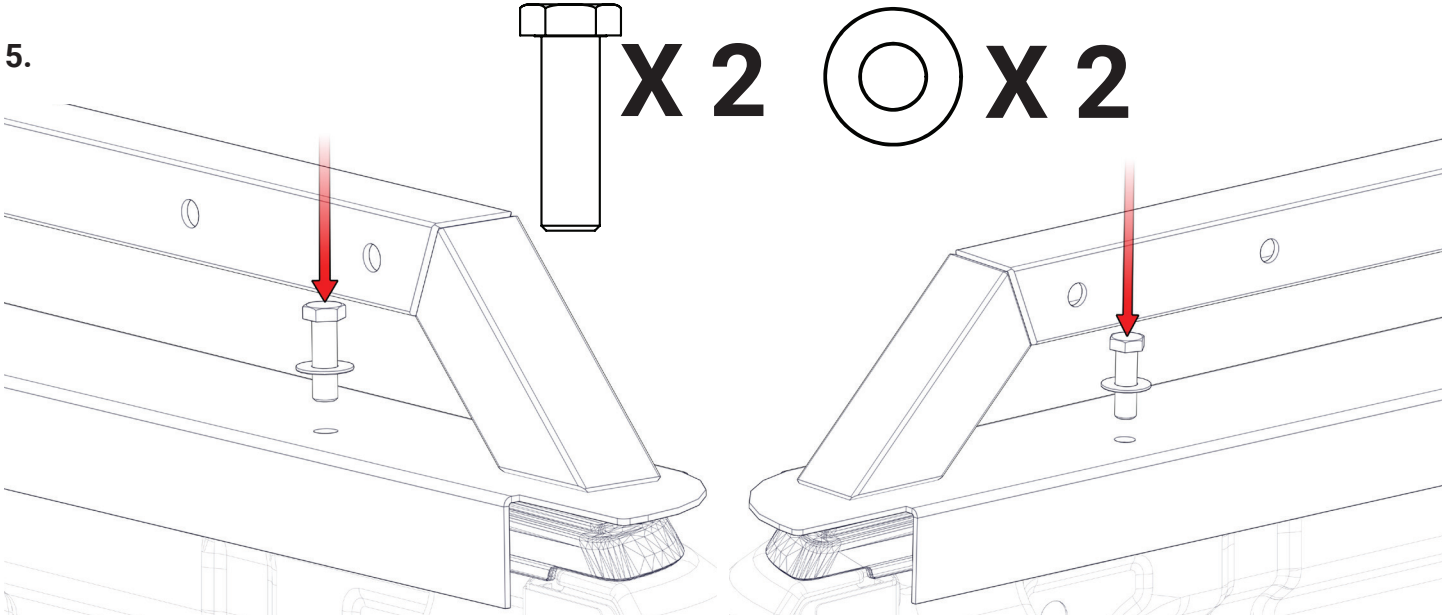

3/8" Stainless Steel Flat Washer

3/8" Zinc Plated Nylock Nut

6.

